


PFAFF®



Designed to be
embroidered with
creative™ Cutwork
Needle Kit.

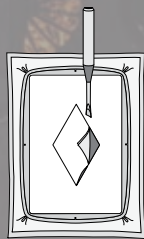


Sold as an
accessory



CUTWORK AND MORE

by Betty Svensson

Cutwork Needle Embroidery

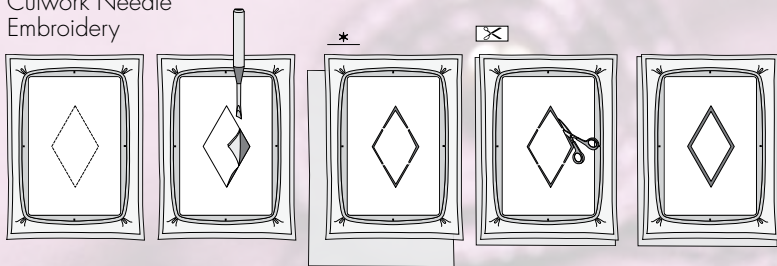

(✂) Cut inside marked area if not using INSPIRA™ Cutwork Needles

* Add a new heavy weight water soluble stabilizer underneath the hoop for cutwork embroidery, or add fabric underneath the hoop for reversed applique.

✂ Trim and remove the cut fabric if using INSPIRA™ Cutwork Needles

🧹 Clean the Bobbin Area

⛔ This design cannot be rotated or mirrored

INSPIRA™ Cutwork Needle #1

INSPIRA™ Cutwork Needle #2

INSPIRA™ Cutwork Needle #3

INSPIRA™ Cutwork Needle #4

IMPORTANT RESIZING NOTICE:
Embroideries digitized for Cutwork Needles
CAN NOT be resized or scaled.


Embroider cutwork with
INSPIRA™ Cutwork
Needles.

1. 2292 1545
2. (✂) Cut inside marked area if not using INSPIRA™ Cutwork Needles
3. Needle #1
4. Needle #2
5. Needle #3
6. Needle #4
7. * Add a heavy weight water soluble stabilizer underneath the hoop
8. 2587 1189
9. 2587 1189
10. ✂ Trim and remove the cut fabric
11. 2587 1189
12. 🧹 Clean the Bobbin Area

Embroider cutwork
using traditional scissor
for cut outs in design.

1. 2292 1545
2. (✂) Cut inside marked area if not using INSPIRA™ Cutwork Needles
3. Needle #1
4. Needle #2
5. Needle #3
6. Needle #4
7. * Add a heavy weight water soluble stabilizer underneath the hoop
8. 2587 1189
9. 2587 1189
10. ✂ Trim and remove the cut fabric
11. 2587 1189
12. 🧹 Clean the Bobbin Area

Heavyweight water
soluble stabilizer



Handwash



Freestanding
embroideries



Design #1 & 4

The designs begin with
Corner Position Stitches for
easy matching when creating
all-over embroidered fabric.

Design #10 -19

Reversed appliqué

Design #20 -25

Freestanding designs

TIP!

Embellish your
embroideries with the
cut outs for 3D effect.

Design #4



Design #11



Design #16



1

Width: 136 mm
5.4 inch

Height: 216 mm
8.7 inch

Stitches: ≈ 65 550

Robinson-Anton
Gütermann Sulky

1. 2587
1189

2. 2587
1189

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

3. Needle #1

4. Needle #2

* Add a heavy weight
water soluble stabilizer
underneath the hoop

5. 2587
1189


6. 2587
1189

(✂) Trim and remove the
cut fabric

7. 2587
1189

Clean the Bobbin Area

The design begins with
Corner Position Stitches for
easy matching when creating
all-over embroidered fabric.

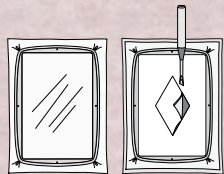

2

Width: 136 mm
5.4 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 28 630

Robinson-Anton
Gütermann Sulky

1.
2587
1189

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.
Needle #1

3.
Needle #2

* Add a heavy weight
water soluble stabilizer
underneath the hoop


4.
2587
1189

5.
2587
1189

✂ Trim and remove the
cut fabric

6.
2587
1189

Clean the Bobbin Area

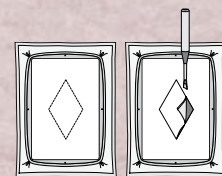

Design #1 x 4



Design #1



3

Width: 136 mm
5.4 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 37 730



Robinson-Anton
Gütermann Sulky

1. 2292
1545

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add a heavy weight
water soluble stabilizer
underneath the hoop


6. 2587
1189

7. 2587
1189

✂ Trim and remove the
cut fabric

8. 2587
1189

🧹 Clean the Bobbin Area

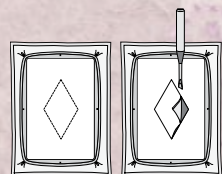

4

Width: 130 mm
5.2 inch

Height: 217 mm
8.7 inch

Stitches: ≈ 38 240



Robinson-Anton
Gütermann Sulky

1.

2292
1545

2.

2292
1545

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

3.

Needle #1

4.

Needle #2

5.

Needle #3

6.

Needle #4



Add a heavy weight
water soluble stabilizer
underneath the hoop

7.

2587
1189

8.

2587
1189



Trim and remove the
cut fabric


9.

2587
1189



Clean the Bobbin Area

The design begins with
Corner Position Stitches for
easy matching when creating
all-over embroidered fabric.

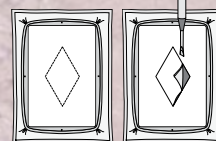

5

Width: 137 mm
5.2 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 40 480



Robinson-Anton
Gütermann Sulky

1.  2497
1308

() Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.  Needle #1

3.  Needle #2

4.  Needle #3

5.  Needle #4

*  Add a heavy weight
water soluble stabilizer
underneath the hoop



6.  2272
1064

7.  2272
1064

 Trim and remove the
cut fabric

8.  2272
1064

 Clean the Bobbin Area

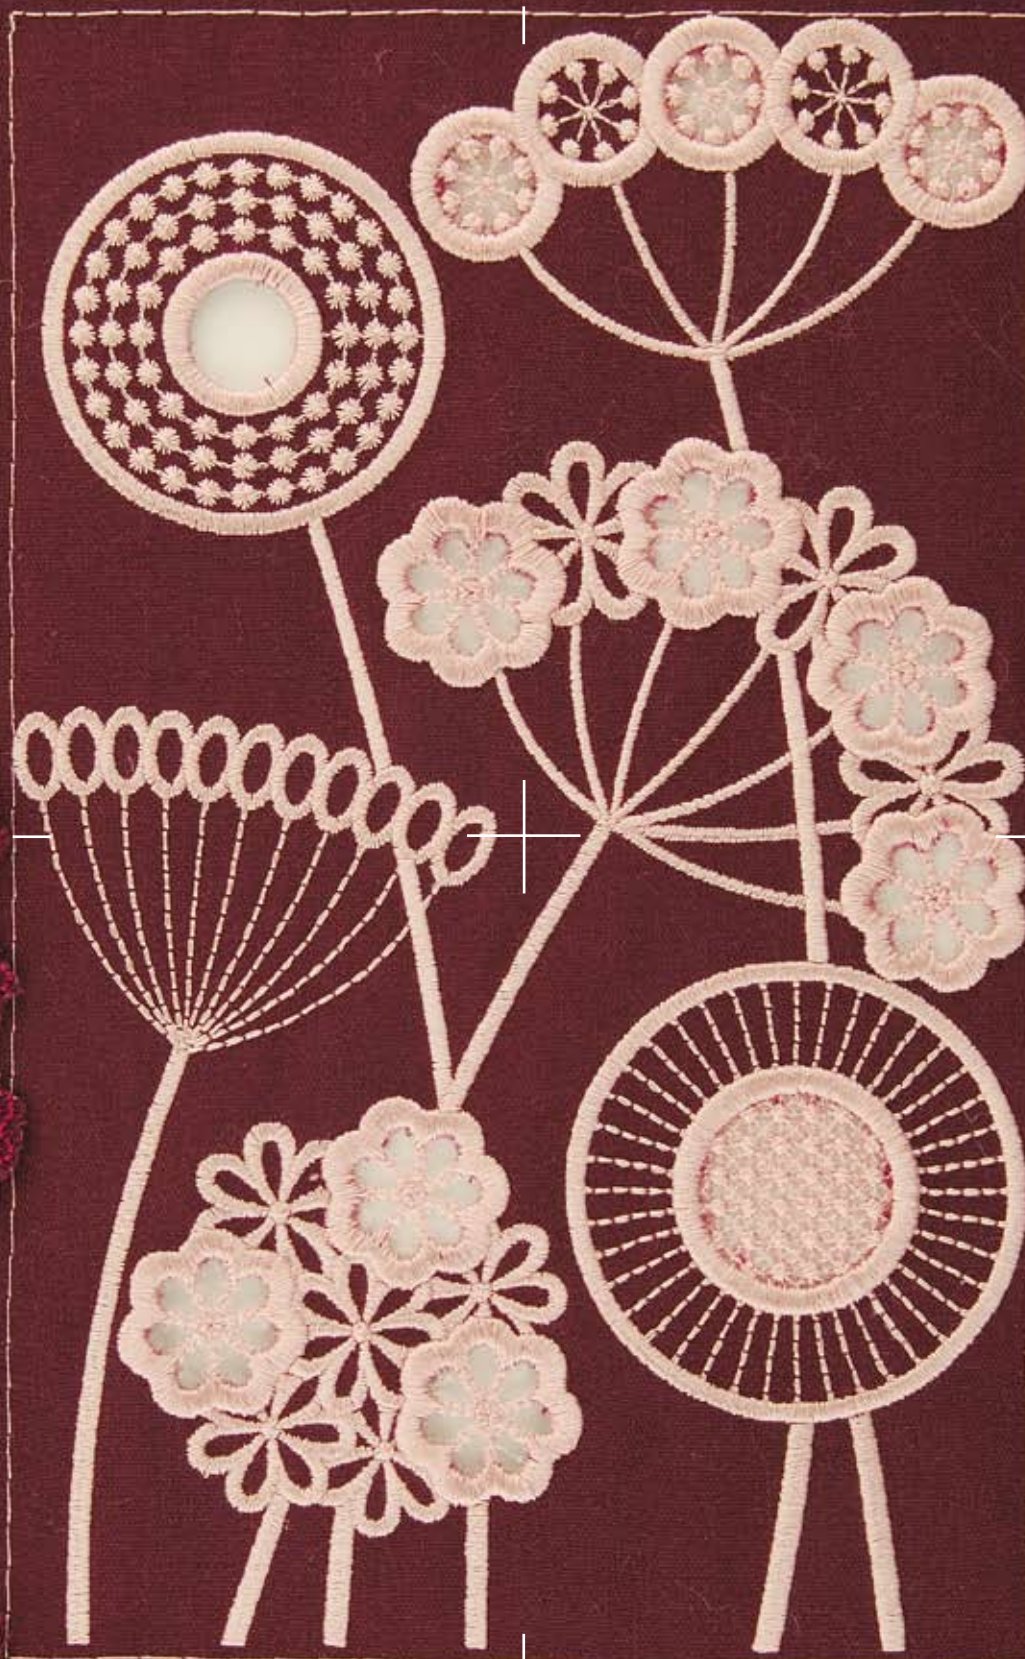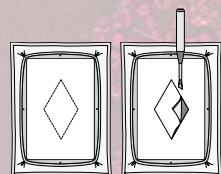

6

Width: 137 mm
5.2 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 36 870



Robinson-Anton
Gütermann Sulky

1.  2497
1308

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.  Needle #1

3.  Needle #2

4.  Needle #3

5.  Needle #4

* Add a heavy weight
water soluble stabilizer
underneath the hoop


6.  2272
1064

7.  2272
1064

 Trim and remove the
cut fabric

8.  2272
1064

 Clean the Bobbin Area

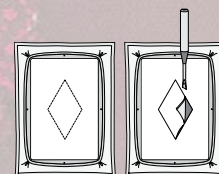

7

Width: 137 mm
4.8 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 34 380



Robinson-Anton
Gütermann Sulky

1.
2424
1080

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.
Needle #1

3.
Needle #2

4.
Needle #3

5.
Needle #4

* Add a heavy weight
water soluble stabilizer
underneath the hoop



6.
2587
1189


7.
2587
1189

✂ Trim and remove the
cut fabric

8.
2587
1189

Clean the Bobbin Area

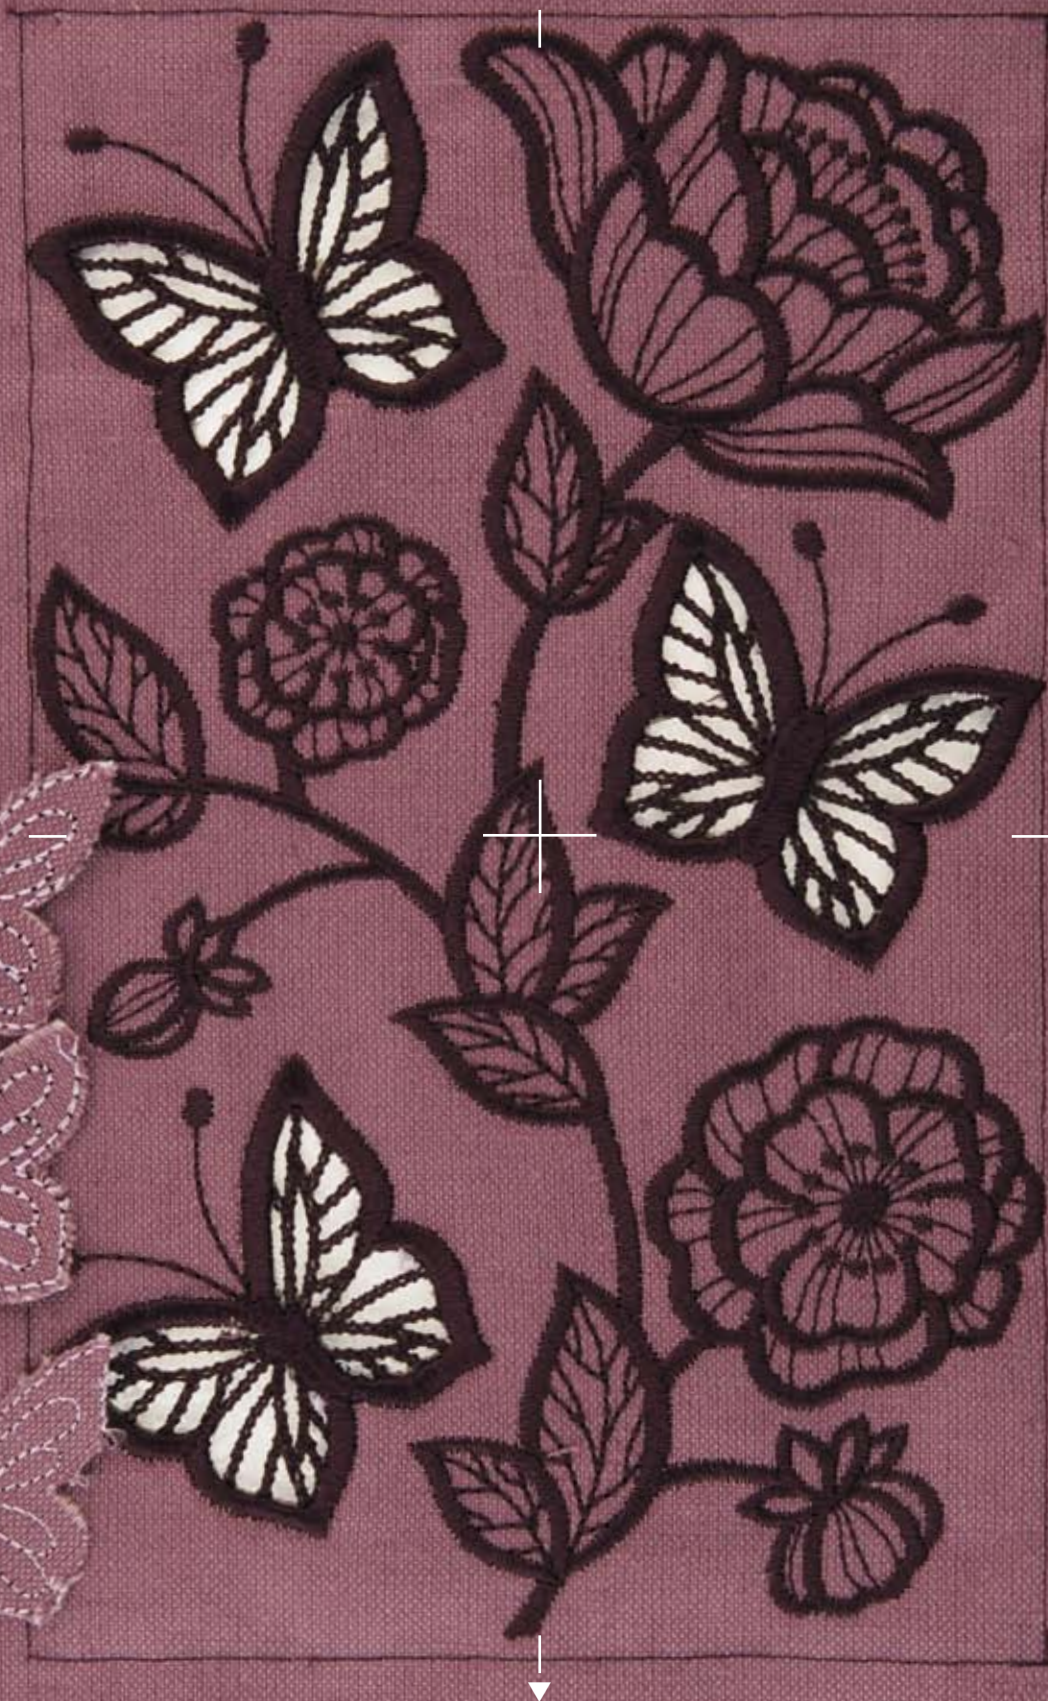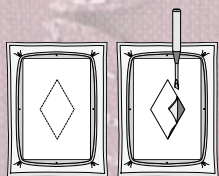

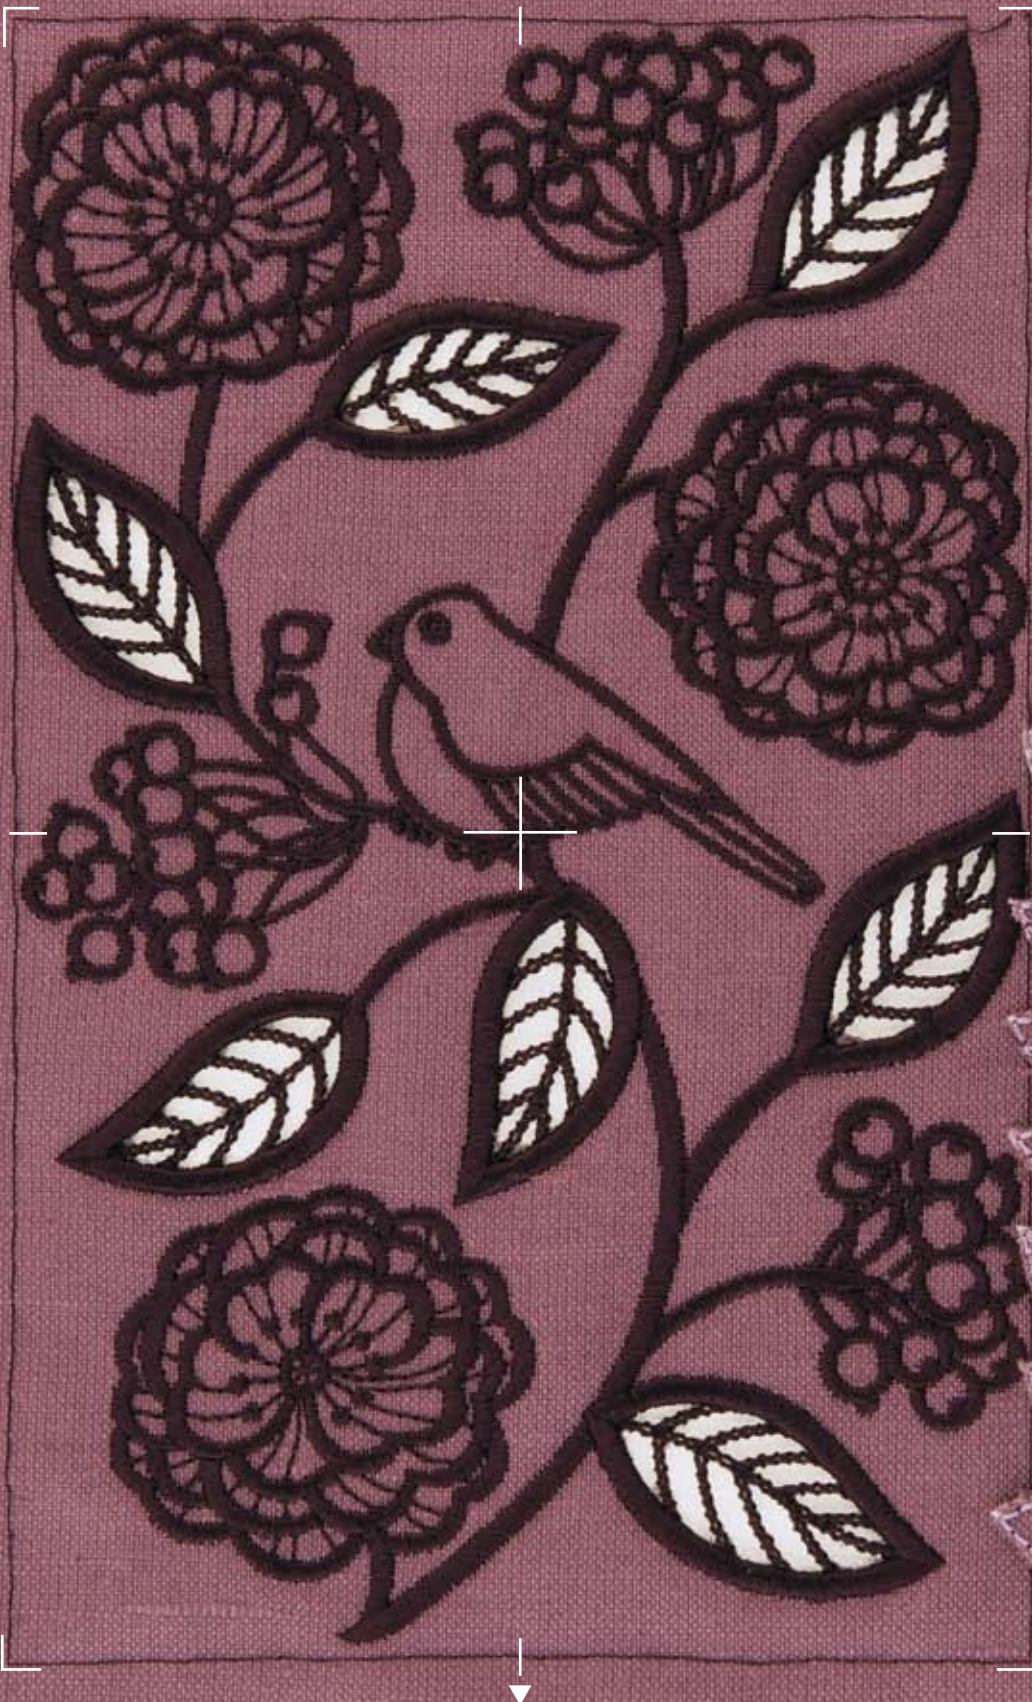

8

Width: 136 mm
5.4 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 40 170



Robinson-Anton
Gütermann Sulky

1.

2424
1080

(3<)

Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.

Needle #1

3.

Needle #2

4.

Needle #3

5.

Needle #4



Add a heavy weight
water soluble stabilizer
underneath the hoop

6.

2587
1189

7.

2587
1189




Trim and remove the
cut fabric

8.

2587
1189



Clean the Bobbin Area

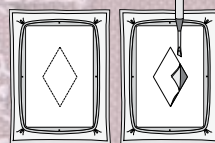

9

Width: 136 mm
5.4 inch

Height: 221 mm
8.8 inch

Stitches: ≈ 42 420



Robinson-Anton
Gütermann Sulky

1.  2426
1255

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.  Needle #1

3.  Needle #2

4.  Needle #3

5.  Needle #4

* Add a heavy weight
water soluble stabilizer
underneath the hoop



6.  2587
1189

7.  2587
1189

 Trim and remove the
cut fabric

8.  2587
1189

 Clean the Bobbin Area

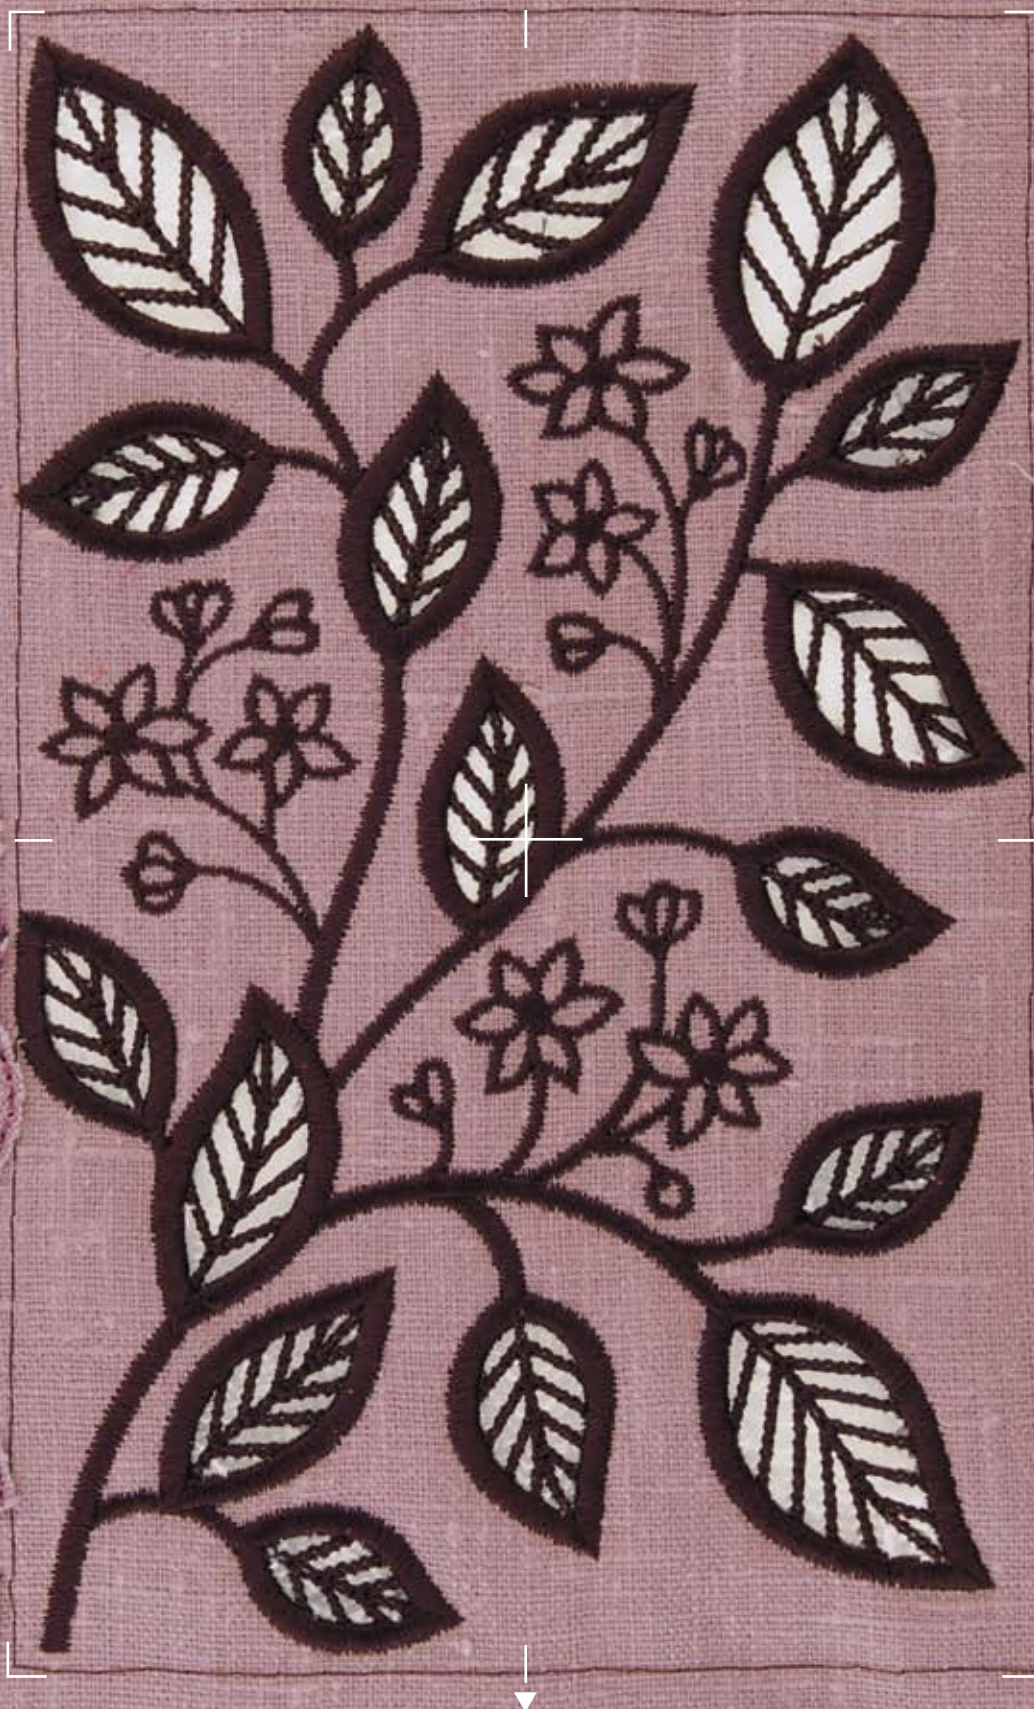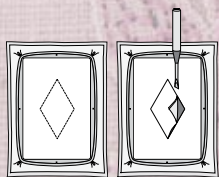

Design #4 embellished with
the cut outs.



Design #12 embellished with the cut outs.





10

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 8 700



Robinson-Anton
Gütermann Sulky

1. 2424
1080

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189



7. 2587
1189

Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

Clean the Bobbin Area

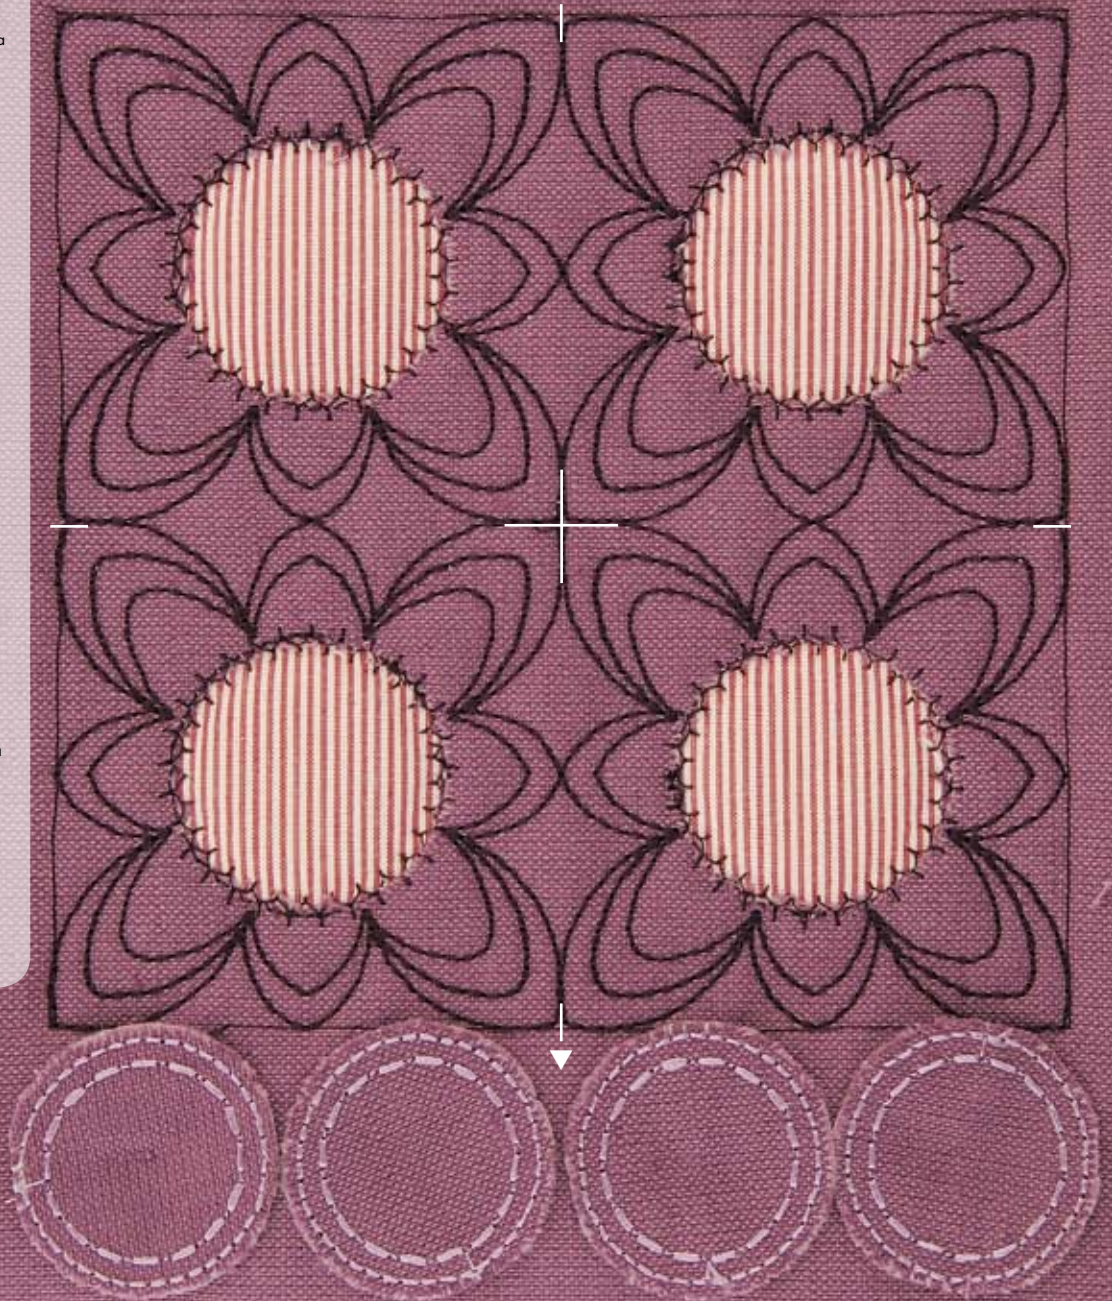

11

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: $\approx$ 13 380



Robinson-Anton
Gütermann Sulky

1. 2424
1080

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189




7. 2587
1189

Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

Clean the Bobbin Area

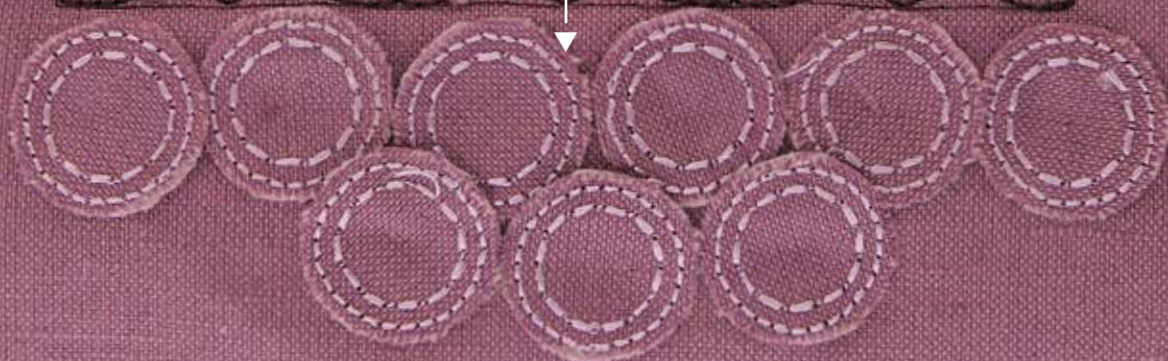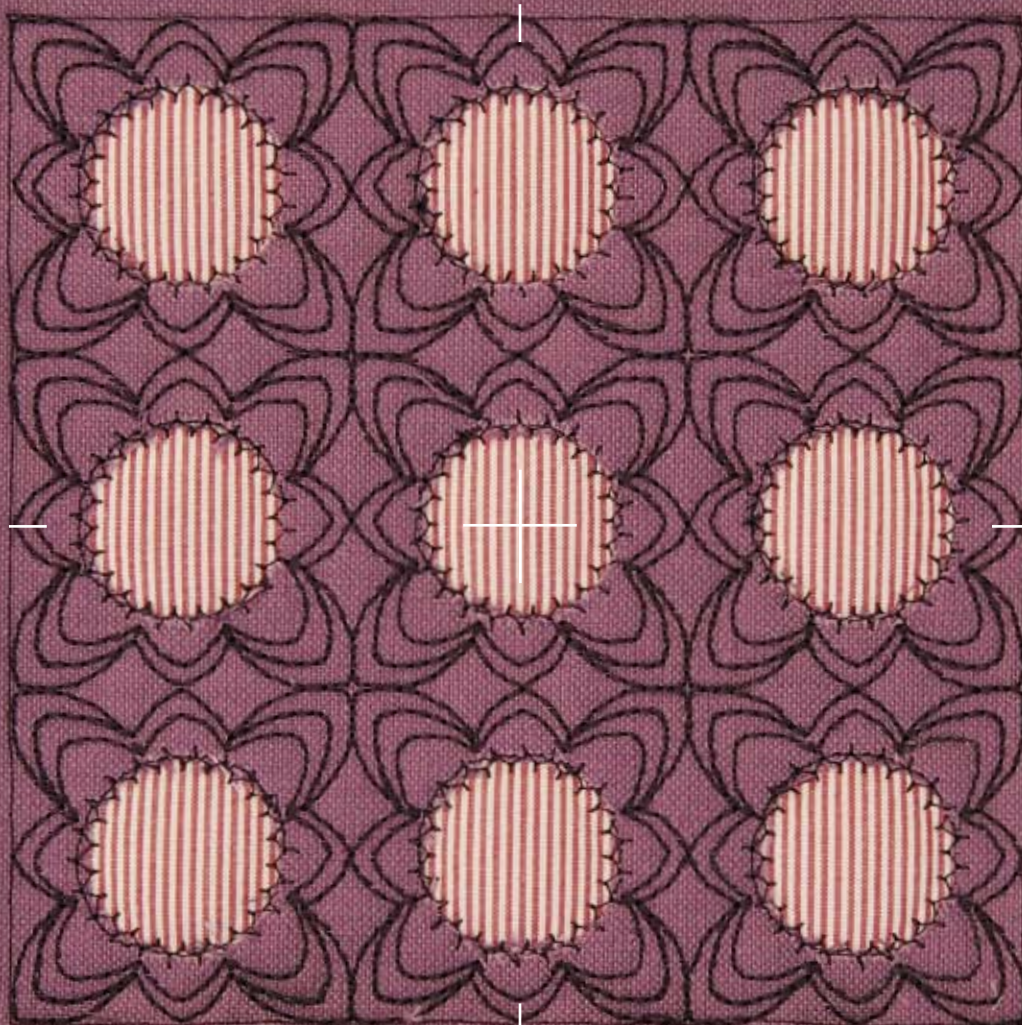

12

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 12 700



Robinson-Anton
Gütermann Sulky

1. 2424
1080

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189


7. 2587
1189

Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

Clean the Bobbin Area



13

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 9 820



Robinson-Anton
Gütermann Sulky

1. 2424
1080

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189


7. 2587
1189

Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

Clean the Bobbin Area





Design #18 embellished with the cut outs.



Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 9 830



Robinson-Anton
Gütermann Sulky

1.  2292
1545

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.  Needle #1

3.  Needle #2

4.  Needle #3

5.  Needle #4

* Add appliqué fabric
underneath the hoop

6.  2587
1189



7.  2587
1189

 Trim and remove the
cut fabric

8.  2587
1189

9.  2587
1189

 Clean the Bobbin Area

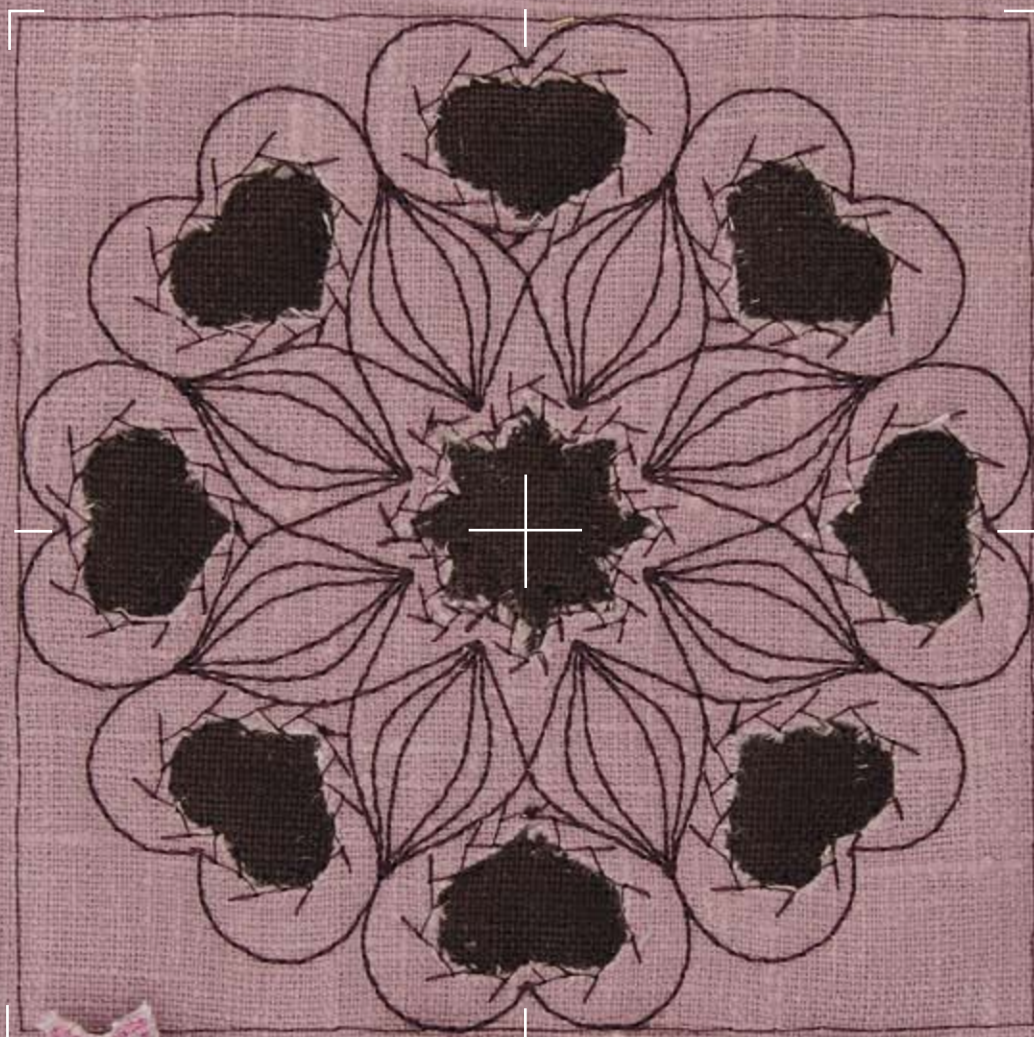

15

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 9 590



Robinson-Anton
Gütermann Sulky

1. 2292
1545

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189


7. 2587
1189

✂ Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

🧻 Clean the Bobbin Area



Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 14 240



Robinson-Anton
Gütermann Sulky

1. 2424
1080

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 2587
1189




7. 2587
1189

Trim and remove the
cut fabric

8. 2587
1189

9. 2587
1189

Clean the Bobbin Area

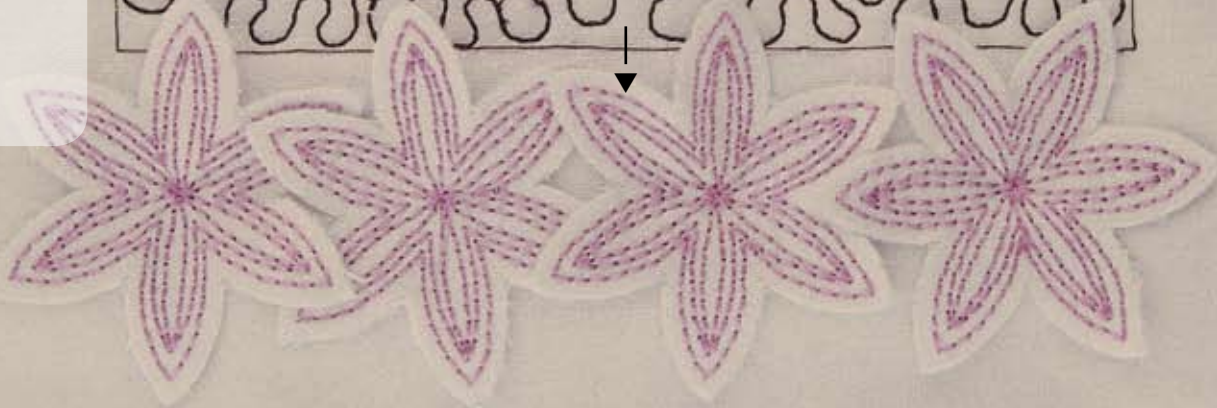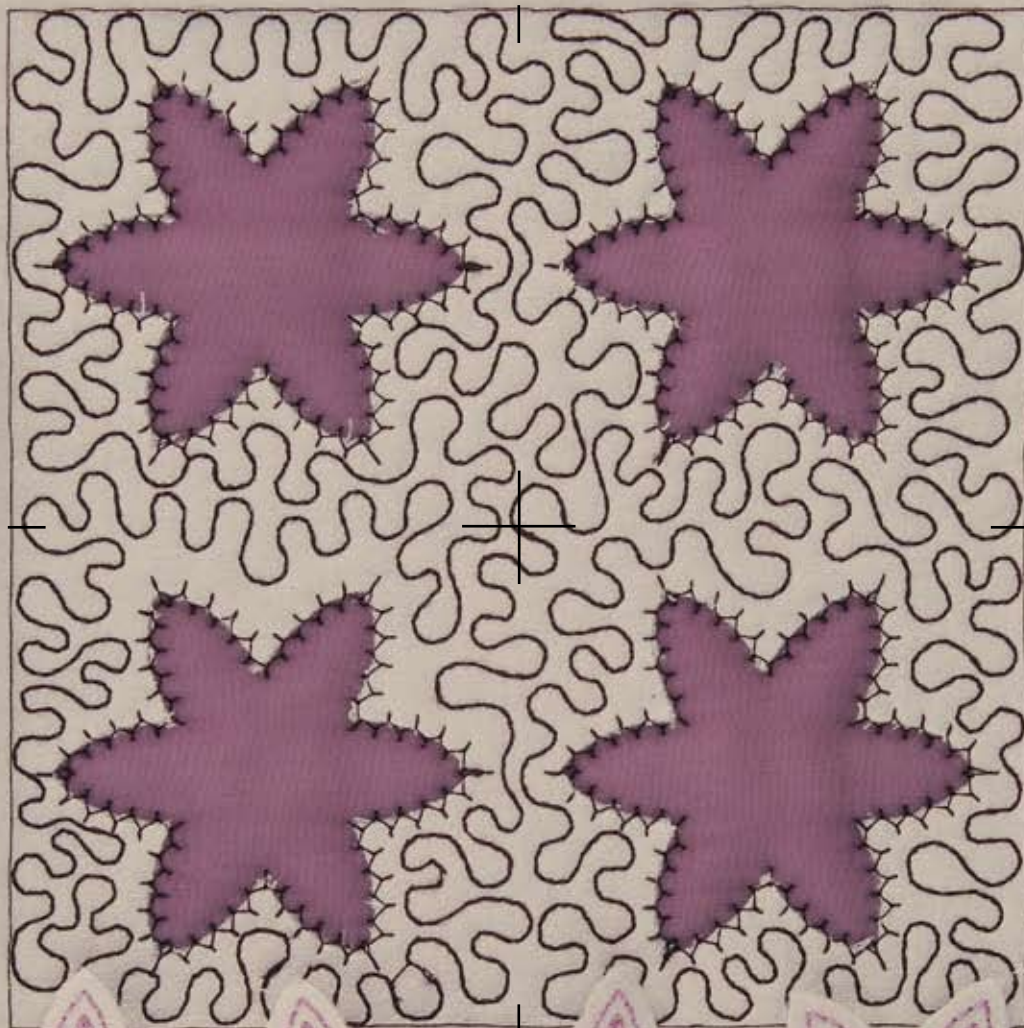

17

Width: 135 mm
5.4 inch

Height: 135 mm
5.4 inch

Stitches: ≈ 18 570





Robinson-Anton
Gütermann Sulky

1.  2424
1080

(3<) Cut inside marked area if not using INSPIRA™ Cutwork Needles

2.  Needle #1

3.  Needle #2

4.  Needle #3

5.  Needle #4

* Add appliqué fabric underneath the hoop

6.  2587
1189


7.  2587
1189

 Trim and remove the cut fabric

8.  2587
1189

9.  2587
1189

 Clean the Bobbin Area



Width: 136 mm
5.4 inch

Height: 136 mm
5.4 inch

Stitches: ≈ 6 930



Robinson-Anton
Gütermann Sulky

1.
2217
1219

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.
Needle #1

3.
Needle #2

4.
Needle #3

5.
Needle #4

* Add appliqué fabric
underneath the hoop

6.
1002
7001



7.
1002
7001

Trim and remove the
cut fabric

8.
1002
7001

9.
2217
1219

Clean the Bobbin Area

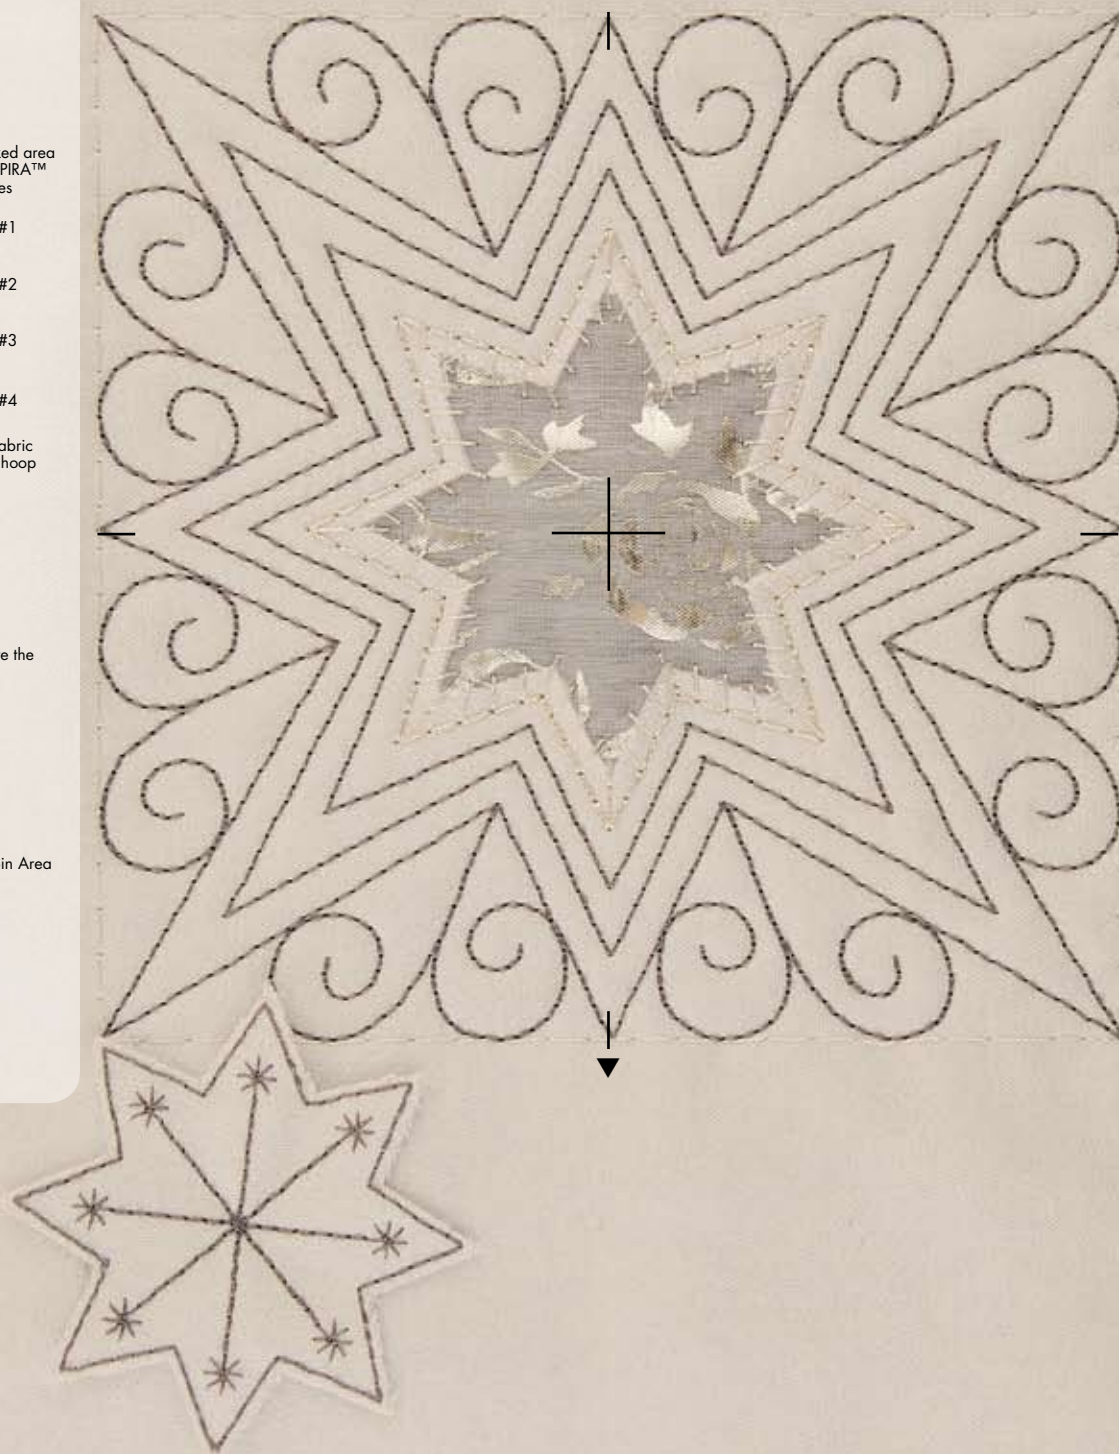

Width: 136 mm
5.4 inch

Height: 136 mm
5.4 inch

Stitches: ≈ 14 820



Robinson-Anton
Gütermann Sulky

1. 2217
1219

(3<) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

* Add appliqué fabric
underneath the hoop

6. 1002
7001


7. 1002
7001

Trim and remove the
cut fabric

8. 1002
7001

9. 2217
1219

Clean the Bobbin Area




Desitgn #7
embellished
with the cut outs.



Design #1, 20, 21, 22, 24, 25



Designs #20 –23 are Freestanding
embroideries.



20

Width: 67 mm
2.7 inch

Height: 67 mm
2.7 inch

Stitches: ≈ 3 010



Robinson-Anton
Gütermann Sulky

1.
2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.
Needle #1


3.
Needle #2

4.
Needle #3

5.
Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area

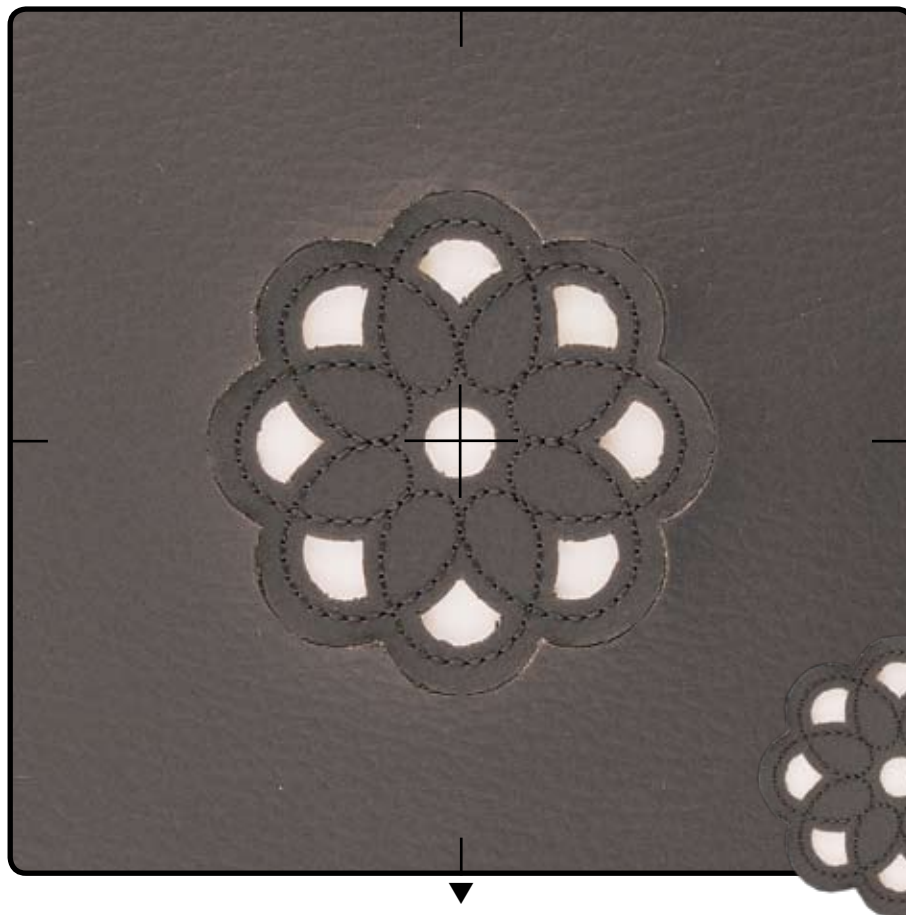

21

Width: 89 mm
3.6 inch

Height: 89 mm
3.6 inch

Stitches: ≈ 4 430



Robinson-Anton
Gütermann Sulky

1.
2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2.
Needle #1


3.
Needle #2

4.
Needle #3

5.
Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area

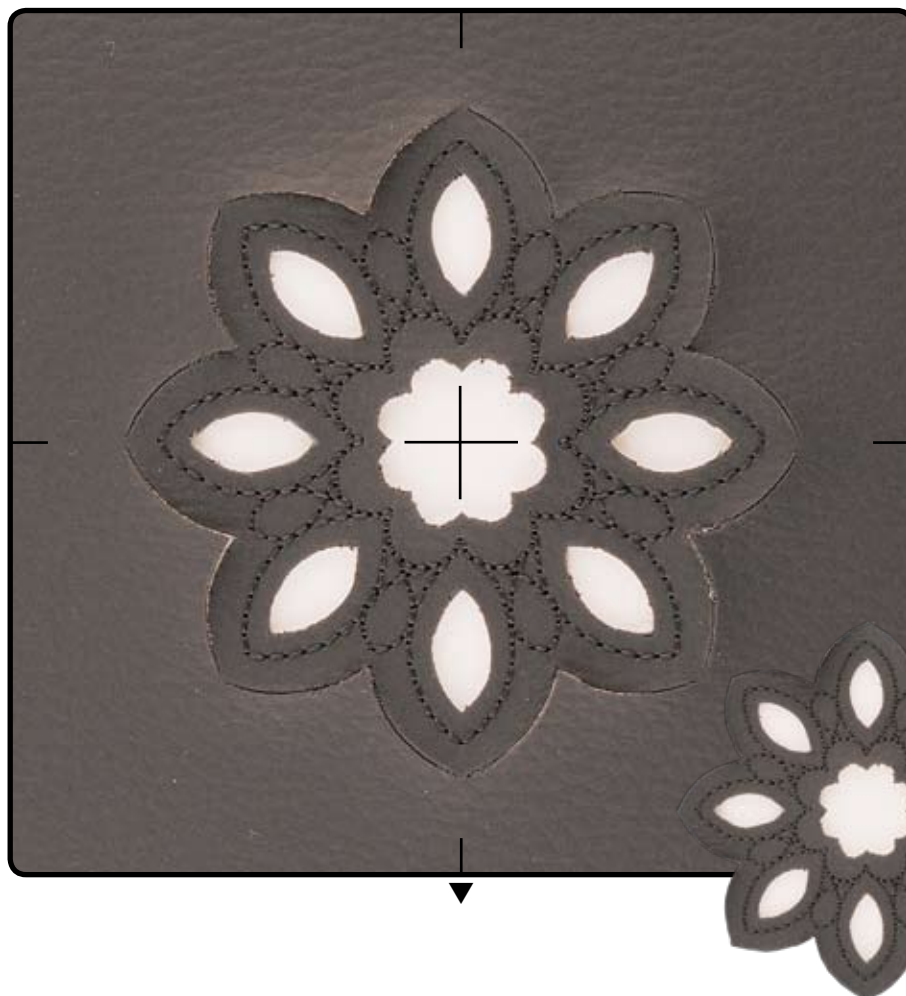

22

Width: 88 mm
3.5 inch

Height: 88 mm
3.5 inch

Stitches: ≈ 4 580



Robinson-Anton
Gütermann Sulky

1. 2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1


3. Needle #2

4. Needle #3

5. Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area

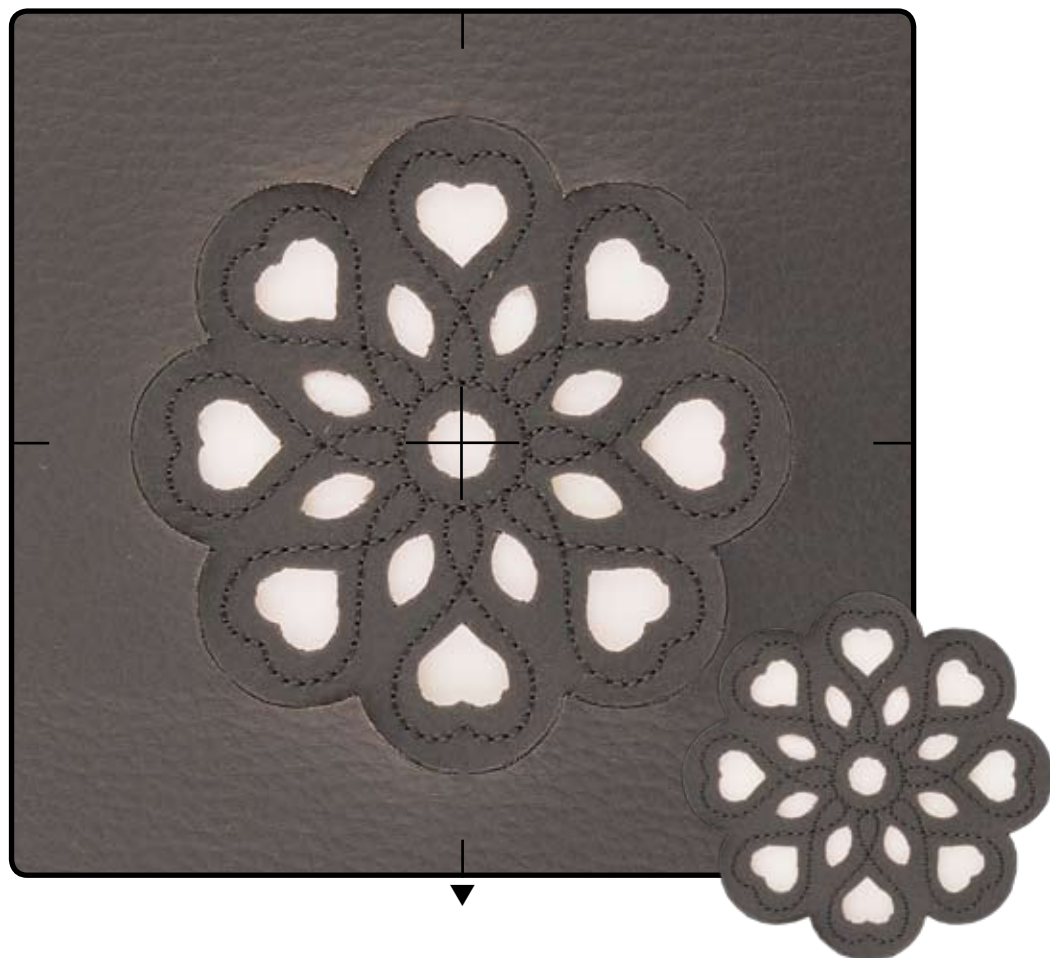

23

Width: 107 mm
4.3 inch

Height: 107 mm
4.3 inch

Stitches: ≈ 6 620



Robinson-Anton
Gütermann Sulky

1. 2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3


5. Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area



Designs #24 –25 are Freestanding embroideries.



24

Width: 112 mm
4.5 inch

Height: 112 mm
4.5 inch

Stitches: ≈ 8 110



Robinson-Anton
Gütermann Sulky

1. 2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1

3. Needle #2

4. Needle #3

5. Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area



25

Width: 110 mm
4.4 inch

Height: 110 mm
4.4 inch

Stitches: ≈ 8 310



Robinson-Anton
Gütermann Sulky

1. 2217
1219

(✂) Cut inside marked area
if not using INSPIRA™
Cutwork Needles

2. Needle #1


3. Needle #2

4. Needle #3

5. Needle #4

✂ Trim and remove the
cut fabric

🧹 Clean the Bobbin Area

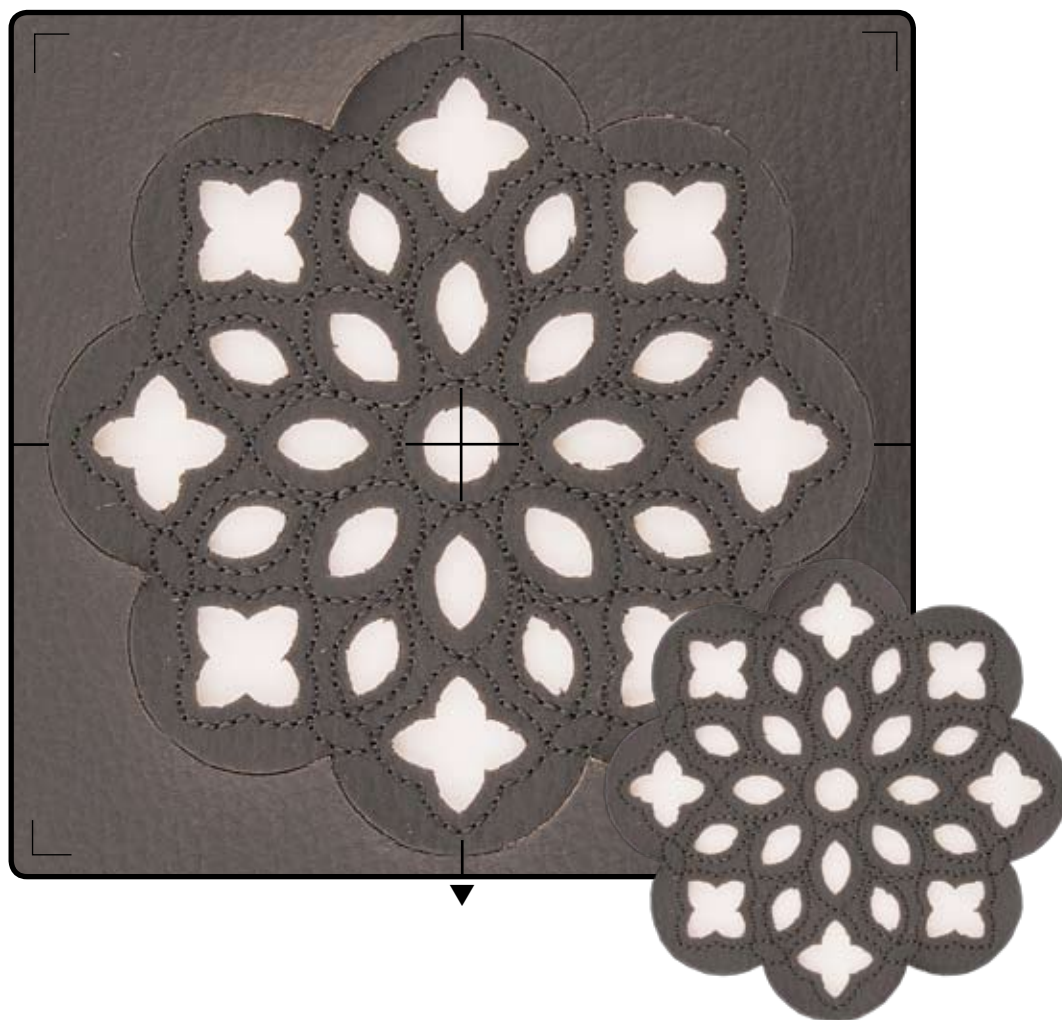

Design #1, 20, 21, 22, 24, 25




●●● CUTWORK AND MORE

443



Cut jump stitch,
Trimcommand

creative™ RECTANGULAR HOOP 120 x 115 / 4.7" x 4.5"

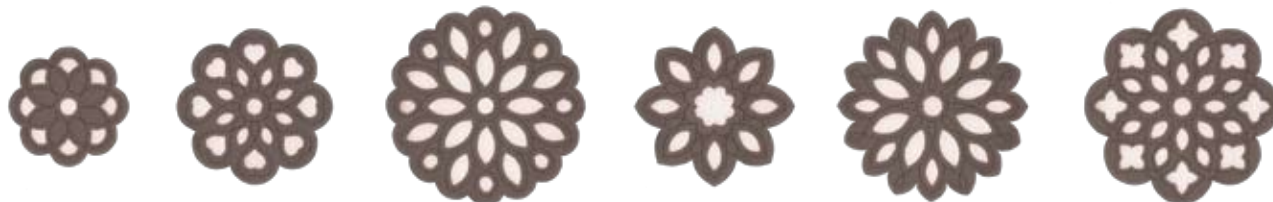

creative™ HOOP 225 x 140 / 9" x 5.6"



creative™ HOOP 225 x 140 / 9" x 5.6"



This collection is digitized to use either INSPIRA™ Cutwork Needles or traditional scissors for cut outs in designs.

The designs in this collection are stitched with Robison-Anton 40 WT thread
Gütermann Sulky Rayon 40 WT thread numbers are given next to the Robinson-Anton numbers